



**ELB - USB - datalogger**

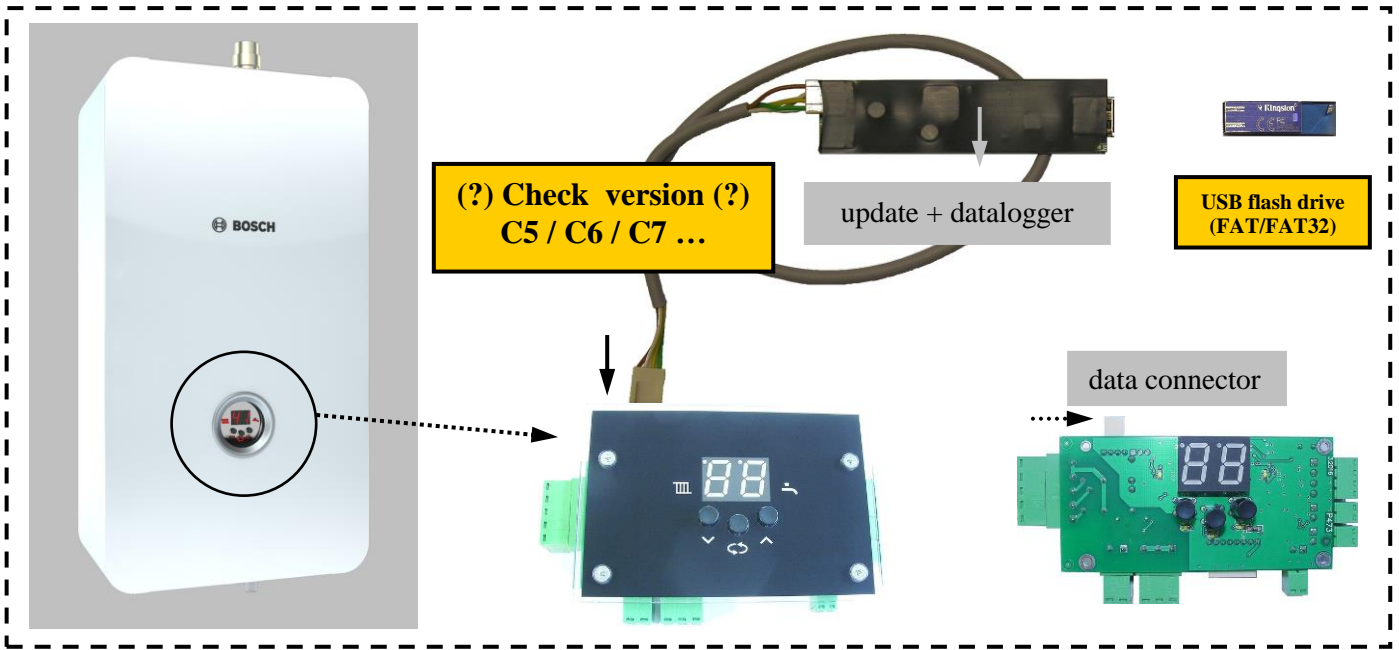

**A) = update Tronic Heat 3000/3500 (+ EKR/GSM module)**

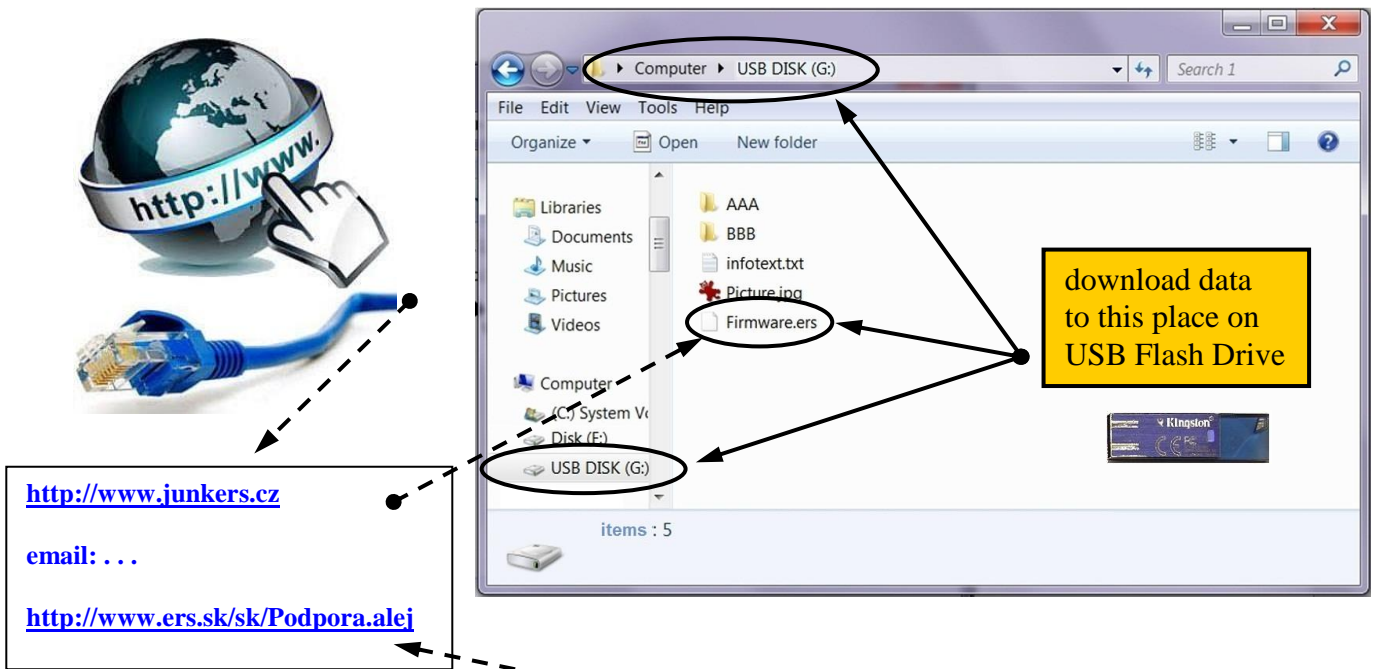

[ELBSetting v.1.7.x.xx](#)

[Manual ELBSetting](#)


[Manual USBDataLogger](#)

[Firmware](#)

01



02

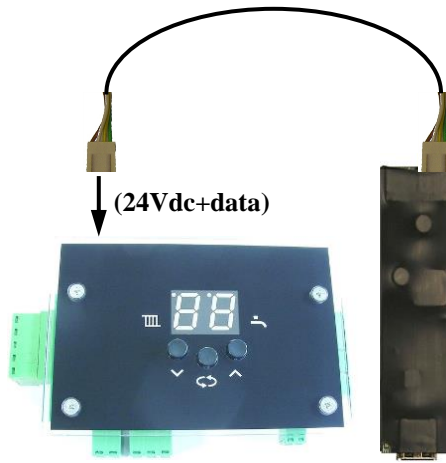


03




04




05

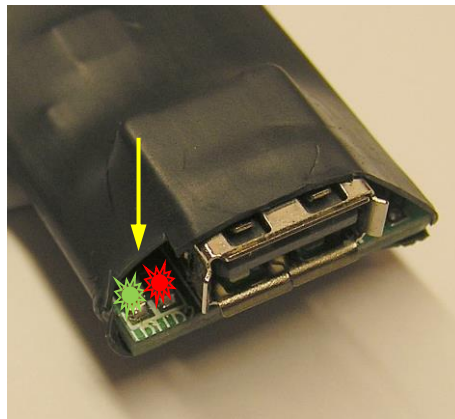


06

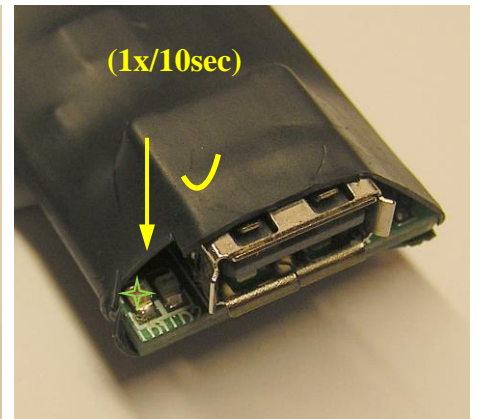


07

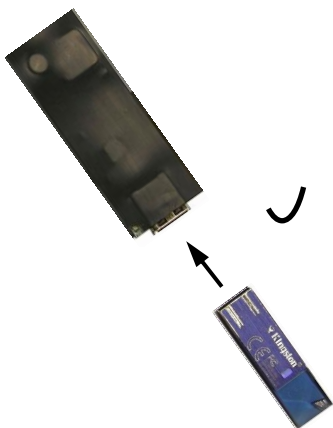


08

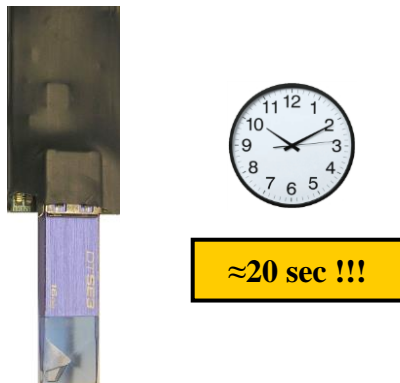


09

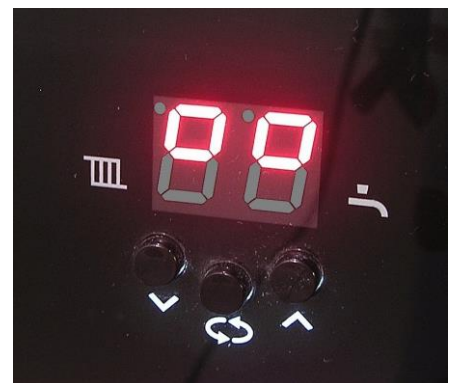


10

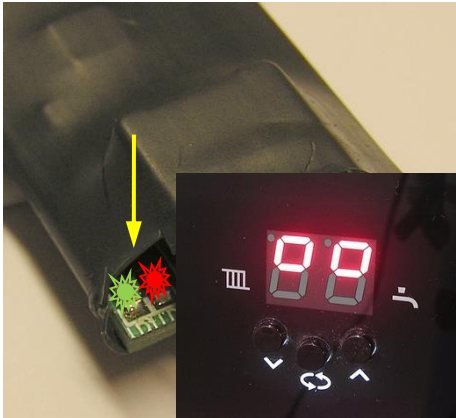

11

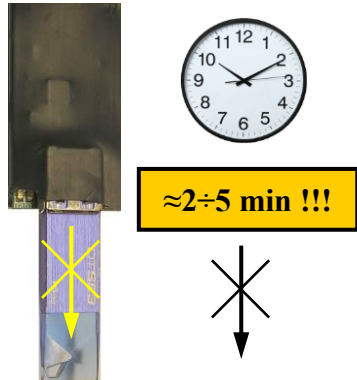

12

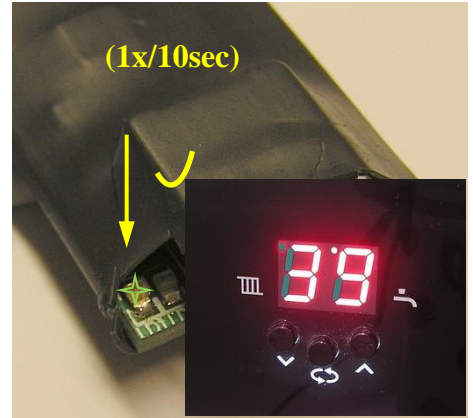


13



14



15

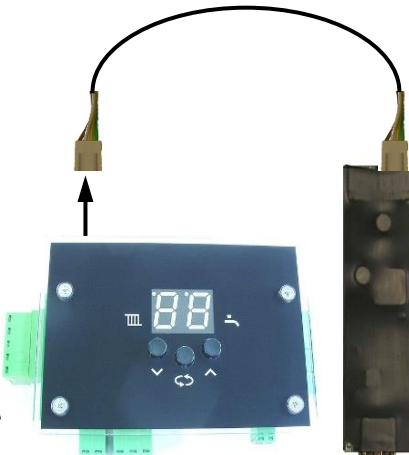


16

**!!Set SE90 = 1!!**  
**(factory setting)**  
**and check PA +**  
**SE parameters**  
**by table ELB-**  
**Cx and actual**  
**connecting.**  
**„Mainly PA00;**  
**SE03; SE07;**  
**SE09; SE25“.**

**If the data cannot be uploaded, try another**  
**USB flash drive or format it (FAT; FAT32)!**


**B) – datalogger for Tronic Heat 3000/3500**

02 ...

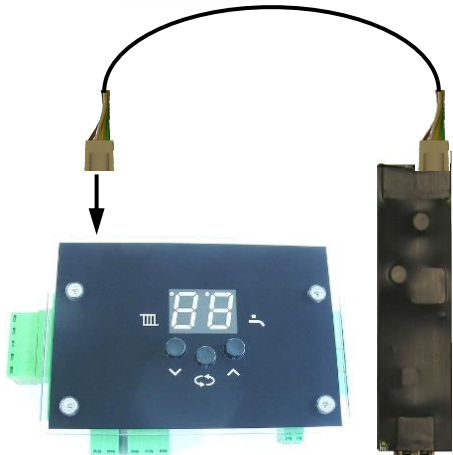



**connect logger**  
**permanently,**  
**saves data (max.**  
**for the last 3 days**  
**one period)**

... 14

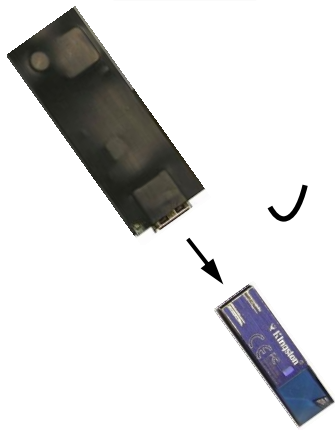



17

18

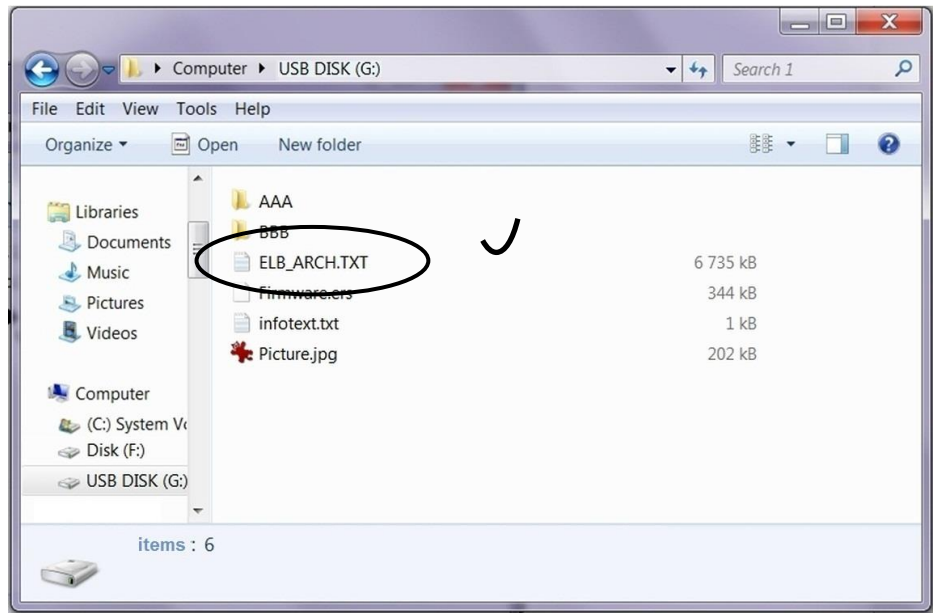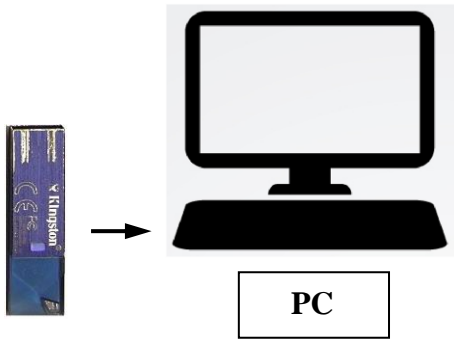

19

20

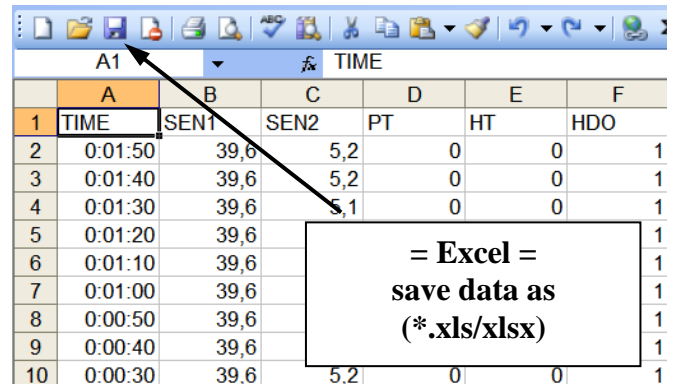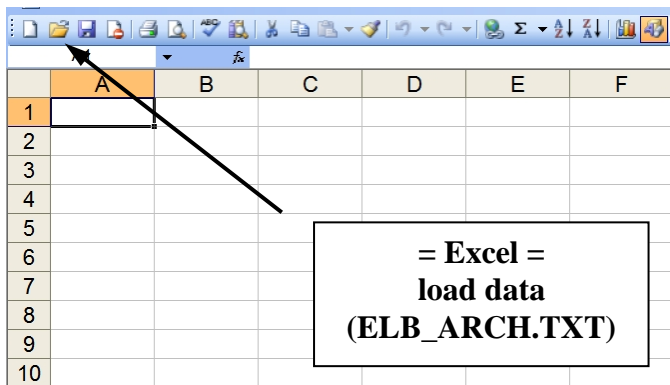

21

